 


L1001/L1002

操作指南 | Setup Guide

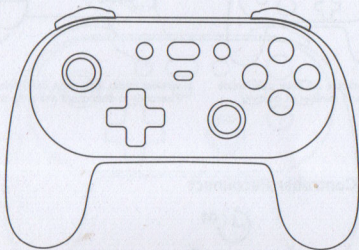

 
良值小钢炮NS/PC二代手柄

IINE Athena Wireless Controller PC Version


产品图片仅供参考
Pictures above for reference only

C
中文说明书



E
Manual

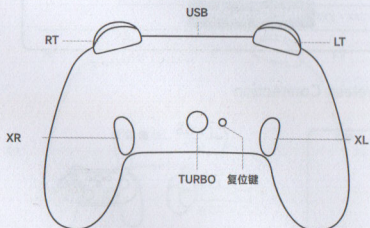

PC - 2.4g无线连接

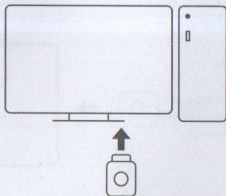 

按下适配器的配对键，直至
灯光闪烁

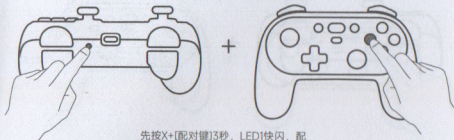  

先按X+[配对键]3秒，LED1快闪，配
对成功后LED2常亮



 
XINPUT模式



DINPUT模式




按住[HOME]2S，切换XINPUT/DINPUT模式

PC - 有线连接

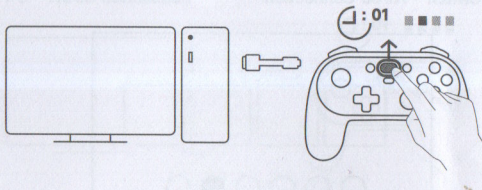

2

   Switch - 无线连接

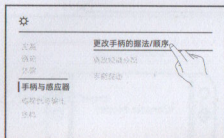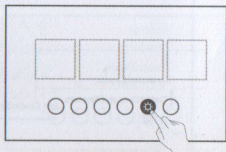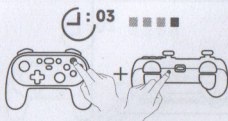



手柄功能设置 - 连发/自动连发设置

手动连发

首次按[Turbo]+任意动作键，设置手动连发

 
 
自动连发

再次重复按键操作可将手动连发设置为自动连发

清除连发

第三次重复操作，清除连发。或长按[Turbo]5S

请注意，长按连发键5秒后，连发功能与宏功能将会一起清除。

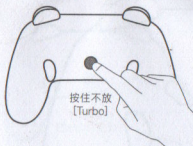


设置连发键，手柄实现自动连击


连发速率调节

[Turbo]+[右摇杆]往右，加快连发速率

 [Turbo]+[右摇杆]往左，减慢连发速率

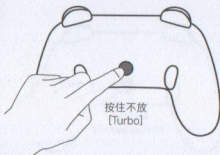

+

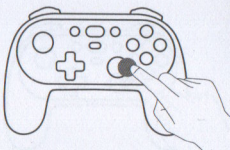 

一档

每秒连续连发5下

二档

 
 
 
每秒连续连发12下(默认)

三档

每秒连续连发20下




宏功能设定

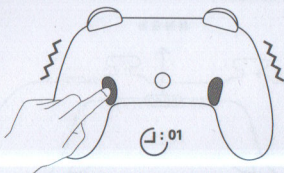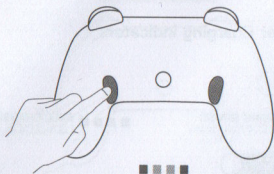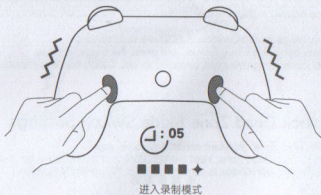


清除宏定义功能

 按住连发键5秒清除[宏功能]键全部设置，清除成功后震动提示

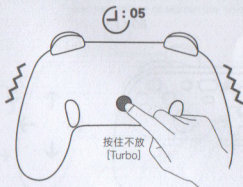


循环宏定义功能

 按下[Turbo]+[XR/XL]可打开/关闭循环宏定义功能

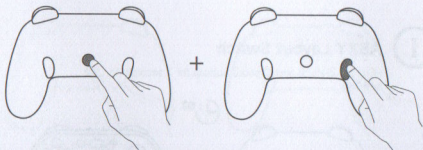

禁用/开启宏功能

 
长按[Turbo]+[XL]+[XR] 2秒切换宏功能（禁用/开启），成功后震动提示

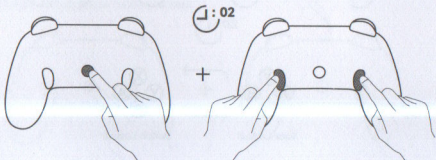



电量显示

 03

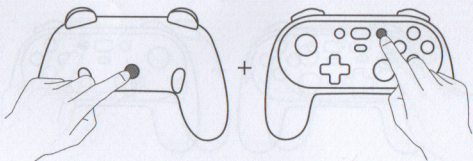

电量指示灯



25%以下



26%-50%



51%-75%



 
76%-100%



手柄震动调节

[Turbo]+[右摇杆]往上, 增强震动强度

[Turbo]+[右摇杆]往下, 减弱震动强度

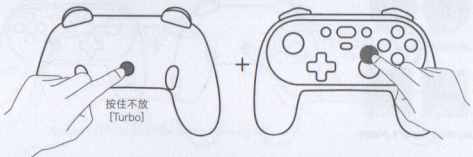

按住不放
[Turbo]

一档

0%

二档

40%

 
 
 
三档

70%


四档

100%

Switch - 有线连接

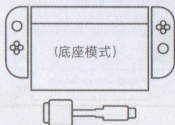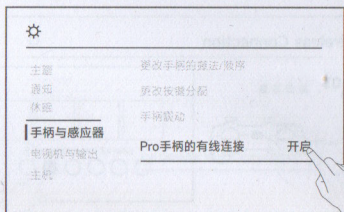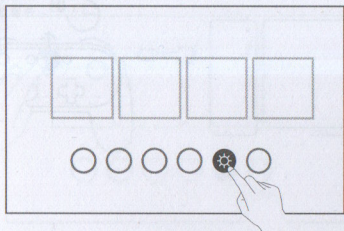

底座 - 手柄



 


主机 - 手柄

3

PS3 - 2.4G无线连接

   
按下适配器的配对键，直至灯光闪烁

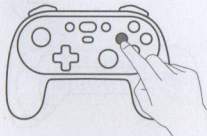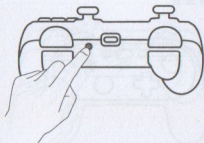


先按X+[配对键]3秒，LED1快闪，配对成功后LED1常亮

4

 安卓连接 - 无线连接



+

 

蓝牙 (Bluetooth)



以搜索设备

 
 
Gamepad



XXXX - XXX

LINE Gamepad

iOS - 无线连接



我的设备

XBOX Bluetooth Gamepad



 
XXXX -

XBOX Bluetooth Gamepad


手柄休眠




自动休眠



手柄开机后，5分钟内无操作自动休眠

 


手动休眠

 

无线模式下，手柄开机时，长按[配对键]5秒断开连接并休眠

 手柄回连

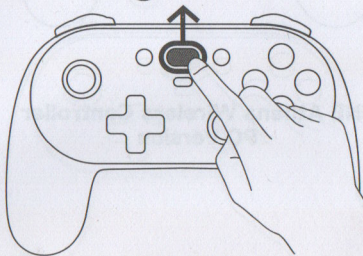


支持回连最后连接的设备





十字键左摇杆互换

 同时按[START]+[L3]2S，十字键与左摇杆互换

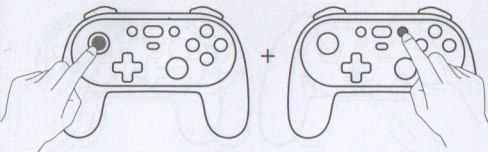

摇杆画圆和画方切换

  按住[右摇杆/左摇杆]+[Turbo]1秒切换画圆/画方功能，成功后震动提示。重复操作可来回切换

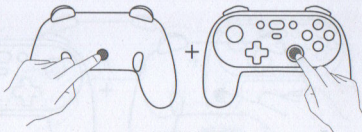



摇杆默认为画圆




十字键左四向八向切换

  同时按[SELECT]+[方向键右]3秒，切换十字键四向/八向模式。
成功后震动提示

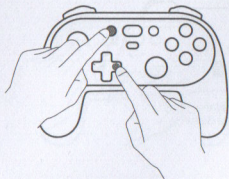


ABXY布局互换

 按下[SELECT]+[选项键]2S切换ABXY按键布局

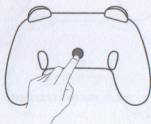

⌂: 02

 +



XBOX布局



任天堂布局



摇杆与扳机校准

按Home+截图键使LED1慢闪进入校准模式，再按A键开始校准，此时LED2慢闪。摇杆最大圈转3次，扳机正常力度压3次，完成后按A键退出，校准完成。

默认状态：常规死区（中心有死区）。

转换为0死区：长按[Turbo]+[L3]+[R3]三秒，成功后震动提示（无记忆功能）。



手柄充电指示

休眠模式



充电状态下
LED1-LED4慢闪



充满状态下
LED1-LED4常亮

 
连接模式



充电状态下
对应平台指示灯闪烁




充满状态下
LED1-LED4常亮

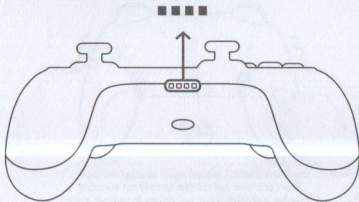




手柄复位

 ⌂: 01

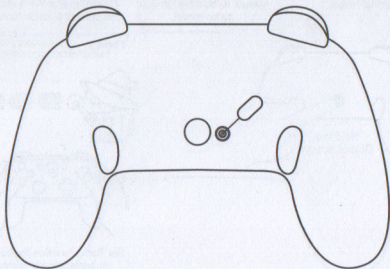

L1001/L1002

操作指南 | Setup Guide


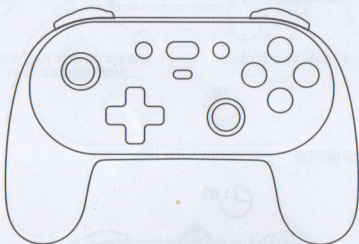 


IINE Athena Wireless Controller PC Version


Pictures above for reference only

中文说明书

  
E
Manual

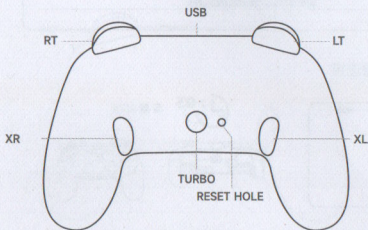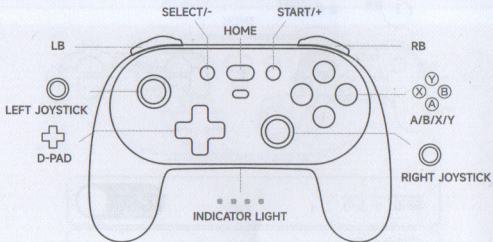

 PC - Wireless Connection via 2.4G Receiver

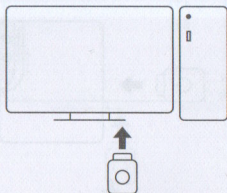

 Press the receiver [Pairing] button until the light flashes.

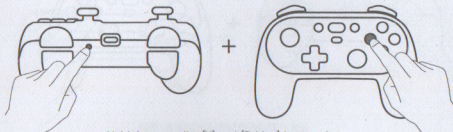

Hold the controller [X] and [Pairing] buttons for 3 seconds, LED1 will flash quickly.
After successful pairing, LED2 will stay lit.



 
 
XINPUT MODE



DINPUT MODE





Hold the [Home] button for 2 seconds to switch the mode.

PC - Wired Connection

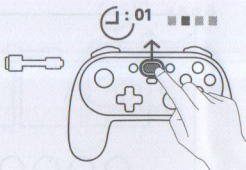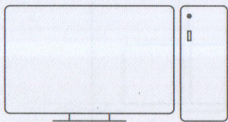

2

    Switch - Wireless Connection

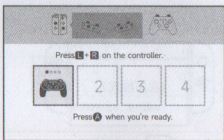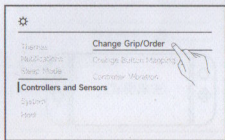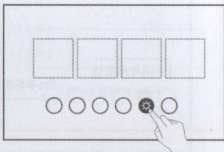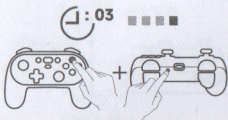




Controller Function Settings - Turbo Function Settings

Manual Turbo Mode

 Press the [Turbo] and any action buttons to activate manual turbo.

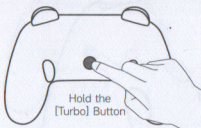


Auto Turbo Mode

Repeat the operation for the second time to switch manual turbo mode to auto turbo mode.

Clean Turbo Function

Repeat the operation for the third time or hold the [Turbo] button for 5 seconds to clean the turbo function.

 Please note: Holding the Turbo button for 5 seconds will clean both the Turbo and Macro functions simultaneously.




Set Turbo function for buttons to automatically combo.




Turbo Rate Settings

Increase: Hold the [Turbo] and push the [Right Joystick] to the right.

 Decrease: Hold the [Turbo] and push the [Right Joystick] to the left.

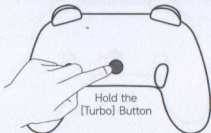

+

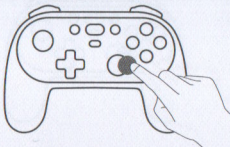 

Level 1

5/s

Level 2


12/s (default)

Level 3

20/s




 Macro Function Settings

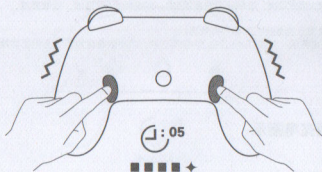

Hold the [XR/XL] button for 5 seconds to enter recording mode.

 
Please note: This action will clean both the Turbo function and the Macro function simultaneously.

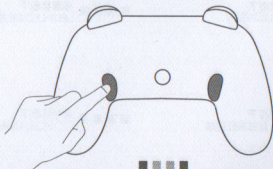

Press the [XR/XL] button to record the macro:

[XR] Recording: LED4 will light up.

 [XL] Recording: LED1 will light up.

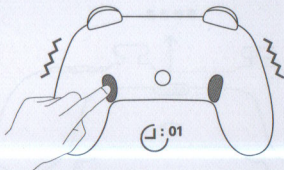


Press the [XR/XL] button again to stop recording.

The controller will rumble to confirm success.

Controller indicator lights will return to normal status.


Clear Macro Function

 Hold the [Turbo] button for 5 seconds to clean the macro function.
The controller will rumble to confirm success.

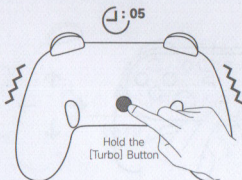


Loop Macro Function

 Press the [Turbo] and [XR/XL] buttons to switch loop macro on/off.

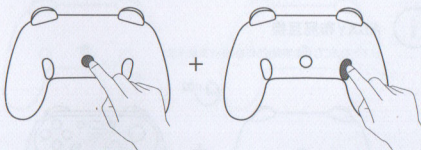

Enable/Disable Macro Function

 
Hold the [Turbo], [XL] and [XR] buttons for 2 seconds to switch macro functionality.
The controller will rumble to confirm success.

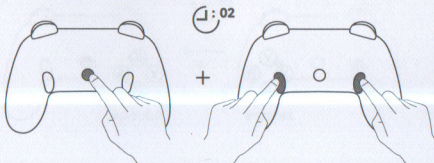



Battery Power Display

 03

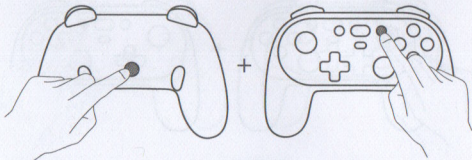


Battery Indicator Light






Rumble Adjustment

Increase: Hold the [Turbo] button and push the [Right Joystick] up.


 
Decrease: Hold the [Turbo] button and push the [Right Joystick] down.

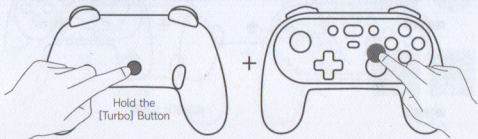

Switch - Wired Connection

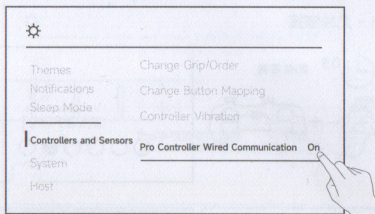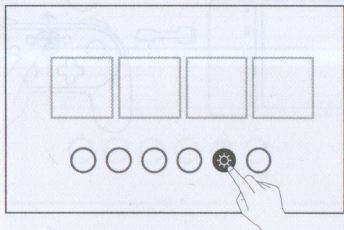   

Dock - Controller


 
 


Console - Controller

3

PS3 - Wireless Connection via 2.4G Receiver

   Press the receiver [Pairing] button until the light flashes.

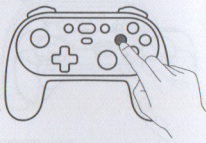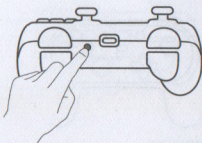

Hold the controller [X] and [Pairing] button for 3 seconds, LED1 will flash quickly.

 
After successful pairing, LED1 will stay lit.

4

Android - Wireless Connection



+



Bluetooth ((Bluetooth symbol))



MY DEVICES

 
Gamepad



XXXX - XXX

IINE Gamepad

iOS - Wireless Connection



MY DEVICES

XBOX Bluetooth Gamepad



 
XXXX

XBOX Bluetooth Gamepad


Controller Sleep Mode




AUTO SLEEP MODE



 The controller will enter sleep mode after 5 minutes of inactivity.




MANUAL SLEEP MODE

 

In wireless mode, long press the [Pairing] button for 5 seconds to disconnect and enter sleep mode.

 Controller Reconnect

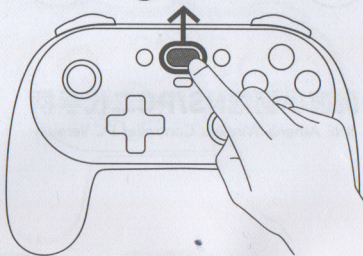


After powering on, press the [Pairing] button to reconnect to the last paired device.





D-Pad and Left Joystick Swap

 Hold the [Start] button and press the [Left Joystick] down for 2 seconds to swap.

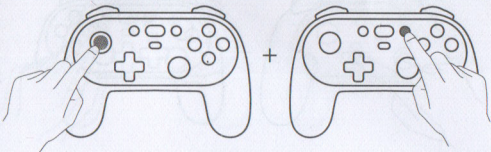

Joystick Circle/Square Control Switch Settings

  Hold the [Turbo] button and [Left/Right Joystick] for 1 seconds to switch.
The controller will rumble to confirm success.

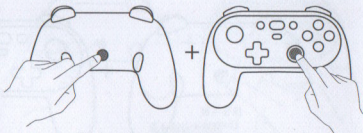



The joystick control area is a circle by default.




D-Pad 4-Way/8-Way Switch Settings

  Hold the [Select] button and press right on the [D-pad] for 3 seconds to switch. The controller will rumble to confirm success.

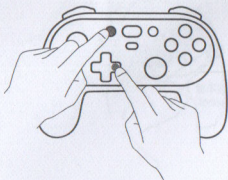

ABXY Layout Switch

 Hold the [Select] and [Option] buttons for 2 seconds to switch.

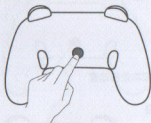

+



Xbox Layout



Switch Layout



Joystick and Trigger Calibration

1. Press [Home] + [Screenshot] to make [LED1] blink slowly, entering Calibration Mode.
2. Press [A] to start calibration; [LED2] will start blinking.
3. Rotate the joystick fully 3 times and press the trigger 3 times.
4. After completing the steps, press [A] to exit. Calibration is complete.



Joystick Dead Zone Mode Switch Settings

Default Dead Zone: Standard center-area dead zone
Switch to Zero Dead Zone: Hold the [C], [L3] and [R3] buttons for 3 seconds.
The controller will rumble to confirm success (No memory function.).



Controller Charging Indicators

SLEEP MODE

 
■ ■ ■ ■ ◆ **CHARGING STATUS**
LED1-LED4 flash slowly

■ ■ ■ ■ **FULL CHARGE STATUS**
LED1-LED4 stay lit.

CONNECTION MODE

■ ■ ■ ■ ◆ **CHARGING STATUS**
The platform-specific
LED will flash.

■ ■ ■ ■ **FULL CHARGE STATUS**
LED1-LED4 stay lit.

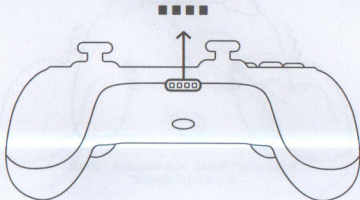



Controller Reset

